

# HDCVI PIR Camera

## User's Manual

**V1.0.0**

# Regulatory Information

The regulatory information herein might vary according to the model you purchased. Some information is only applicable for the country or region where the product is sold.

## FCC Information



### CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### FCC compliance:

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the guide, may cause harmful interference to radio communication.

- For class A device, these limits are designed to provide reasonable protection against harmful interference in a commercial environment. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- For class B device, these limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

## General

This user's manual (hereinafter referred to be "the Manual") introduces the functions, installation and operations of the camera.

## Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual.

Signal Words	Meaning
 <b>WARNING</b>	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 <b>CAUTION</b>	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 <b>TIPS</b>	Provides methods to help you solve a problem or save you time.
 <b>NOTE</b>	Provides additional information as the emphasis and supplement to the text.

## Revision History

No.	Version	Revision Content	Release Date
1	V1.0.0	First release.	November 27, 2018

## Privacy Protection Notice

As the device user or data controller, you might collect personal data of others' such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures include but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

## About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall govern.
- We are not liable for any loss caused by the operations that do not comply with the Manual.

- The Manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper User's Manual, CD-ROM, QR code or our official website. If there is inconsistency between paper User's Manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the Manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the Guide (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

# Important Safeguards and Warnings



## Electrical Safety

- All installation and operation should conform to your local electrical safety codes.
- The power source shall conform to the requirement of the Safety Extra Low Voltage (SELV) standard, and supply power with rated voltage which conforms to Limited power Source requirement according to IEC60950-1. Please note that the power supply requirement is subject to the device label.
- A readily accessible disconnect device shall be incorporated in the building installation wiring.
- Make sure if the camera power adapter meets the camera operating voltage requirement before powering up the device (The material and length of the power cable might influence the device voltage).
- Prevent the power cable from being trampled or pressed, especially the plug, power socket and the junction extruded from the device.
- We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.

## Environment

- Do not aim the device at strong light to focus, such as lamp light and sun light.
- Transport, use and store the device within the range of allowed humidity and temperature.
- Keep the camera away from water or other liquid to avoid damages to the internal components.
- Keep sound ventilation to avoid heat accumulation.
- Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.
- Pack the device with standard factory packaging or the equivalent material when transporting the device.
- It is recommended to use the device together with lightning arrester to improve lightning protection effect.
- It is recommended to get the grounding holes to be grounded to enhance the reliability of the device.
- It is recommended to use qualified video transmission cable to improve video quality. It is recommended to use RG59 coaxial cable or higher standard.



- Use standard components or accessories provided by manufacturer and make sure the device is installed and maintained by professional engineers.
- The surface of the image sensor should not be exposed to laser beam radiation in an environment where a laser beam device is used.
- Do not provide two or more power supply sources for the device; otherwise it might damage the device.

# Table of Contents

<b>Regulatory Information</b> .....	<b>I</b>
<b>Foreword</b> .....	<b>II</b>
<b>Important Safeguards and Warnings</b> .....	<b>IV</b>
<b>1 Introduction</b> .....	<b>1</b>
1.1 General.....	1
1.2 Features .....	1
<b>2 Design</b> .....	<b>2</b>
2.1 Dimension .....	2
2.2 Components.....	3
2.3 Cable .....	3
<b>3 Detection Range</b> .....	<b>4</b>
<b>4 Installation</b> .....	<b>5</b>
4.1 Installing Model A.....	5
4.2 Installing Model B.....	6
4.3 Installing Model C.....	7
<b>5 General Configuration</b> .....	<b>9</b>
5.1 Opening Main Menu.....	9
5.2 Operating OSD Menu .....	10
<b>Appendix 1 Maintenance</b> .....	<b>12</b>
<b>Appendix 2 Technical Specifications</b> .....	<b>13</b>

## 1.1 General

This series of products comply with the HDCVI standard and support the transmission of video and control signal over coaxial cable. They produce video signal with megapixel resolution and require XVR device that comply with the HDCVI standard to achieve high speed, long distance and zero lag transmission of the signal. They are applicable to cover the high definition monitoring needs for locations like financial center, telecom site, supermarket, hotel, government, school and factory.

## 1.2 Features

- 720p series support over 800 m real-time transmission of video and control signal from RG59 cable. For 1080p, 4M and 4k series, the distance is 500 m.
- Support detection of human trespass with PIR.
- Switch automatically between color images at daytime and black-and-white images at night with ICR.
- Provide clear black-and-white images at night by avoiding overexposure of IR light with smart IR.
- Configure devices easily with OSD menu.

## 2.1 Dimensions

Figure 2-1 Model A (mm [inch])

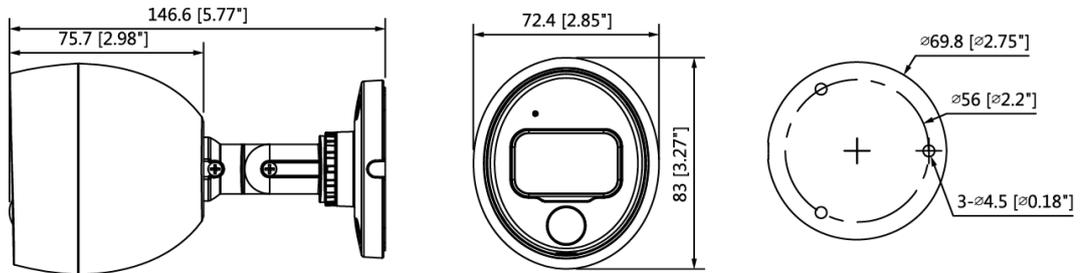


Figure 2-2 Model B (mm [inch])


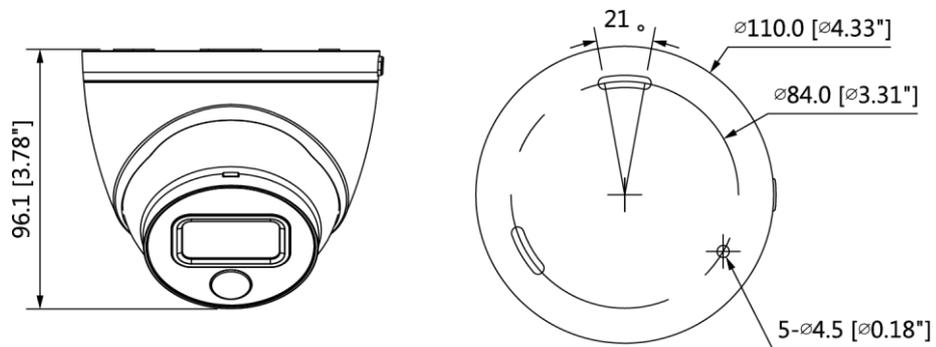


Figure 2-3 Model C (mm)

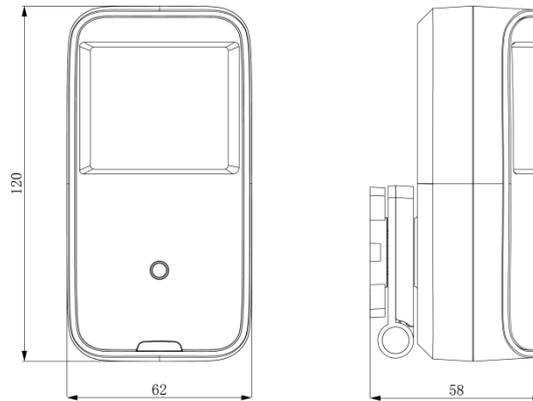

## 2.2 Components

Figure 2-4 Model A, B and C

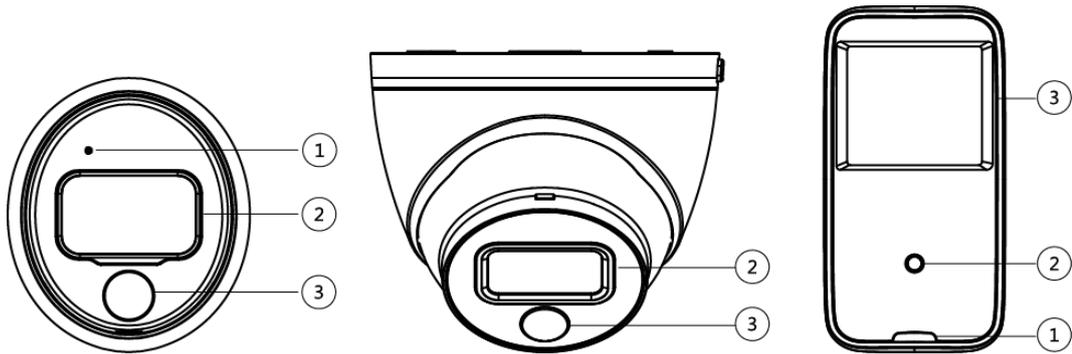


Table 2-1 Component list of model A, B and C


No.	Name
①	PIR indicator light
②	Lens
③	PIR sensor

## 2.3 Cable



- Cable type might vary with different cameras, and the actual product shall prevail.
- PIR is available only on CVI mode.

Figure 2-5 Cable port list

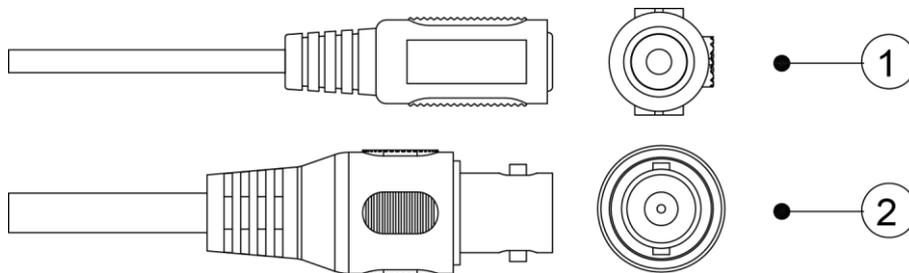

For more information about cable ports, see Table 2-2.

Table 2-2 Cable port description


No.	Port Name	Function
①	12V DC power input	Inputs 12V DC power. Please be sure to supply power as instructed in the manual.  Device abnormality or damage could occur if power is not supplied correctly.
②	Video output	Connects to XVR to output video signal.

# 3

## Detection Range


For model A and B, the horizontal detection range of the sensor is 110°. For model C, the range is 100°. See Figure 3-1.

Figure 3-1 Horizontal detection range

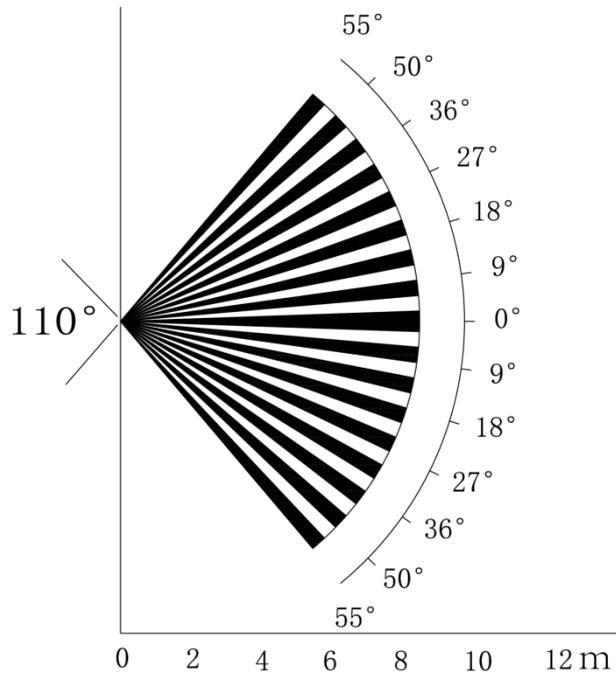

For model A and B, the vertical detection distance of the sensor is 2 m–10 m. For model C, the distance is 1 m–12 m. See Figure 3-2.

Figure 3-2 Vertical detection distance

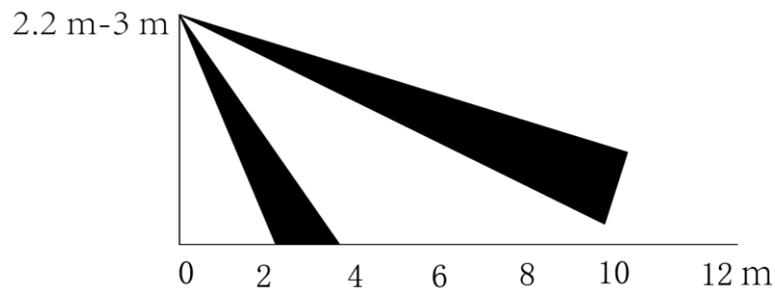

# 4 Installation



- Make sure the mounting surface is strong enough to hold at least three times of the camera weight.
- The following figure is for reference only, and the actual product shall prevail.

## 4.1 Installing Model A

Figure 4-1 Model A installation

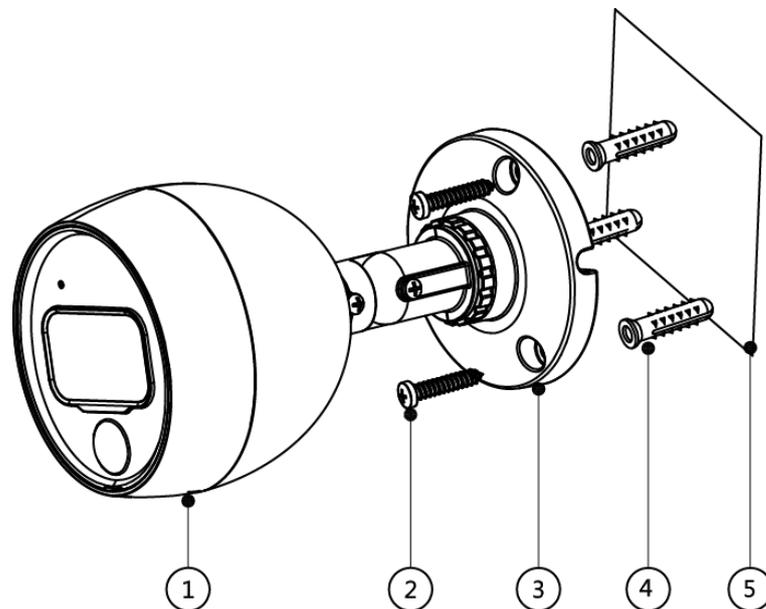


Table 4-1 Installation item list

No.	Item	No.	Item	No.	Item
①	Device	②	Self-tapping screw	③	Bracket
④	Expansion bolt	⑤	Mounting surface	—	—

**Step 1** Drill screw holes (and the cable outlet hole if it needs to go through the mounting surface) on the mounting surface⑤ as indicated on the positioning map.

**Step 2** Different approaches required according to different mounting surfaces.

- For masonry mounting surface, insert expansion bolts④ from the accessory pack in the screw holes.
- For wooden mounting surface, expansion bolts are optional.


**Step 3** Adjust the location of the bracket③ according to cable outlet requirement (top out or side out), and then pull the cable out through mounting surface or the side cable tray.

**Step 4** Align the screw holes on the bracket③ to those on the mounting surface, then put in and fasten the supplied self-tapping screws② to attach the device① to the mounting surface.

**Step 5** Connect the camera to power source, and then connect the device to the XVR device.

**Step 6** Aim the lens to the ideal angle, and then fasten the locking screws. See Figure 4-2.

Figure 4-2 Model A adjustment

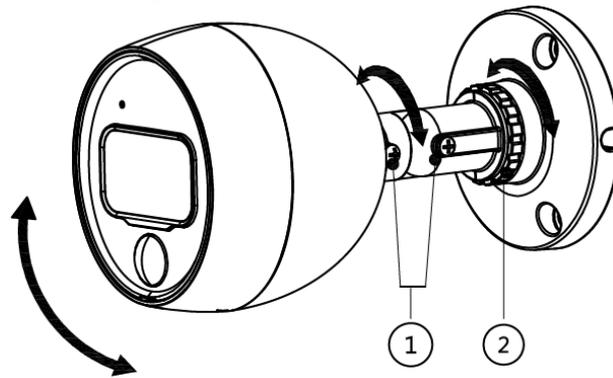

In Figure 4-2, ① represents the locking screws and ② is the locking ring.

## 4.2 Installing Model B

Figure 4-3 Model B installation

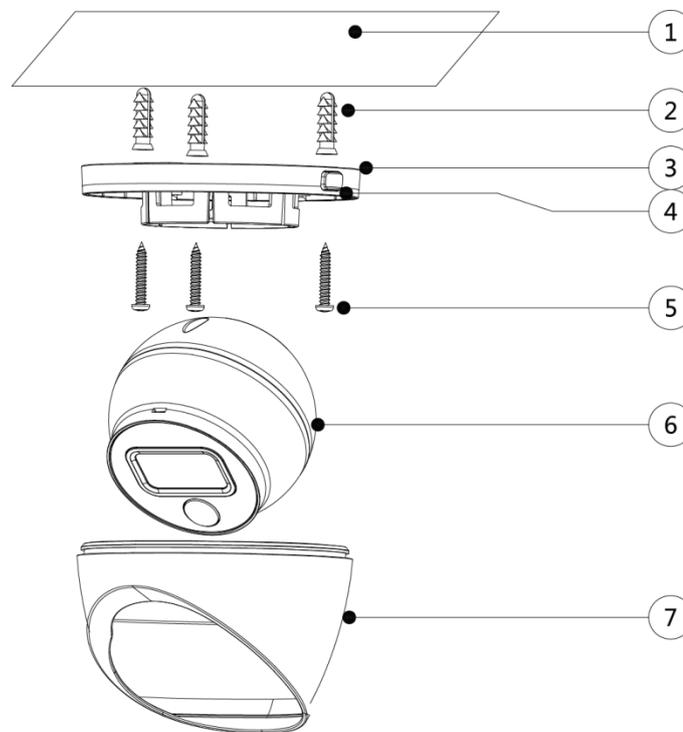


Table 4-2 Installation item list

No.	Item	No.	Item	No.	Item	No.	Item
①	Mounting surface	②	Expansion bolt	③	Pedestal	④	Locking button
⑤	Self-tapping screw	⑥	Device	⑦	Enclosure	—	—

**Step 1** Press the locking button④ to take off the pedestal③.


**Step 2** Confirm the position of screw holes (and the cable outlet hole if it needs to go through the mounting surface①) and drill them on the mounting surface①, and then insert the expansion bolts② in the screw holes.

**Step 3** Align the screw holes on the pedestal③ to those on the mounting surface①, and then pull the cable out through mounting surface or the side cable tray. Attach the pedestal③ to the mounting surface① with the self-tapping screws⑤.

**Step 4** Put the enclosure⑦ (with the device⑥ inside) back into the pedestal③. Connect the device⑥ to power source and the XVR device, and the live view screen is displayed.

**Step 5** Rotate the enclosure⑦ and then rotate the device⑥ to get the lens an ideal angle. See Figure 4-4.

Figure 4-4 Model B adjustment

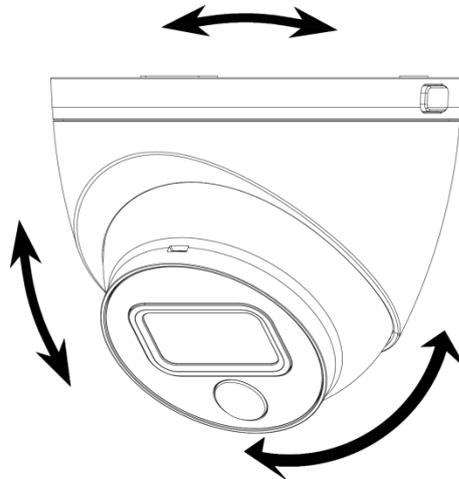

## 4.3 Installing Model C



Installation bracket of model C is composed of three parts (Marked by ①, ② and ③. See Figure 4-5.).

**Step 1** In Figure 4-5, pull component② away from component③ for 90°, and then rotate the component① for 90°. See Figure 4-6.

Figure 4-5 Left side view of model C


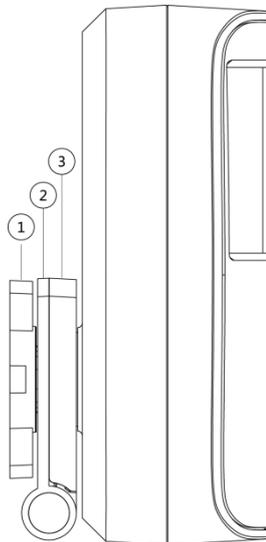


Figure 4-6 Top view of model C

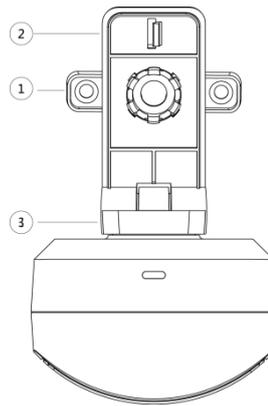

- Step 2** Confirm the position of screw holes (and the cable outlet hole if it needs to go through the mounting surface) and drill them on the mounting surface, and then insert the expansion bolts in the screw holes.
- Step 3** Align the screw holes on the bracket component① to those on the mounting surface, and then pull the cable out through mounting surface or the side cable tray. Attach the bracket component① to the mounting surface with the self-tapping screws.
- Step 4** Connect the camera to power source and the XVR device, and the live view screen will be displayed.
- Step 5** Drag the model C main body forward (or push it backward), and then rotate the main body to aim the lens to the ideal angle.

# 5 General Configuration

Power up the camera and connect it to XVR device with coaxial cable, then the live view screen is displayed. The following instructions will guide you to configure your camera.




- The number of the coaxial port on XVR will display at the lower left corner of the live view window to indicate the corresponding camera.
- Interfaces of different XVR might vary, and the actual product shall prevail.

## 5.1 Opening Main Menu

Step 1 In the live view screen interface, right-click anywhere on the screen. The shortcut menu is displayed. See Figure 5-1.


Figure 5-1 Shortcut menu

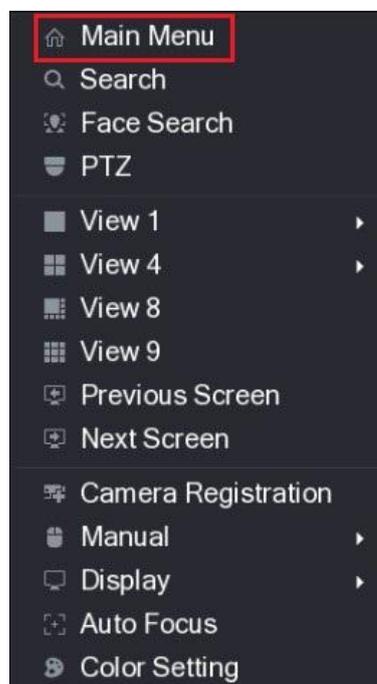

Step 2 Click **Main Menu**.

The **Main Menu** interface is displayed. See Figure 5-2.

Figure 5-2 Main menu

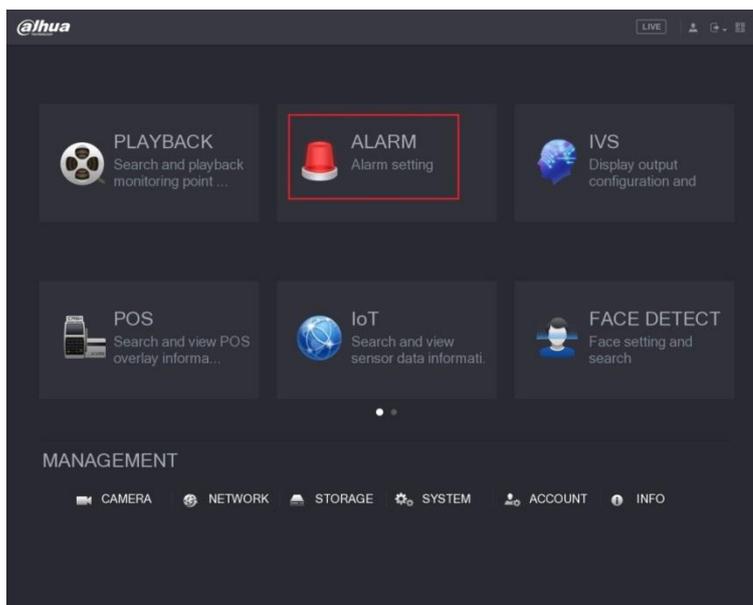

Right-click anywhere on the screen to return to the previous interface until it goes back to live view screen.

## 5.2 Operating OSD Menu




The OSD menus of different cameras might vary, and the actual product shall prevail.

Step 1 In the shortcut menu (Figure 5-1), click **PTZ**.


The PTZ setting interface is displayed. See Figure 5-3.

Figure 5-3 PTZ setting

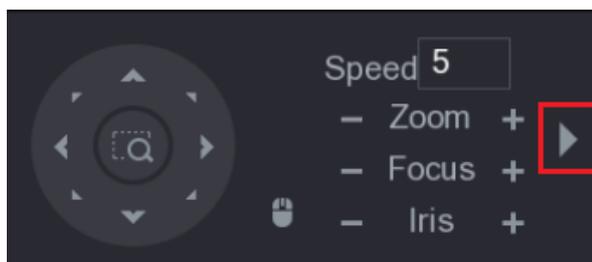

Step 2 Click  to see more options. See Figure 5-4.

Figure 5-4 PTZ setting options

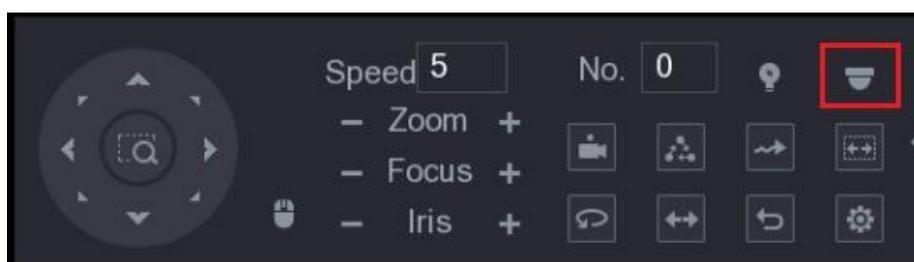


Step 3 Click .

The **MENU OPERATION** panel is displayed. See Figure 5-5.

 
The OSD menu of the corresponding camera is displayed on the live view screen.

Figure 5-5 Menu operation panel

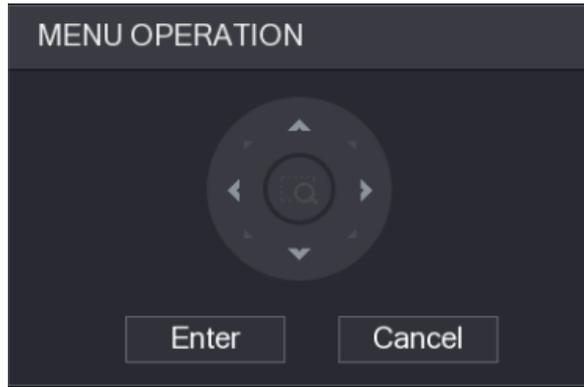

For functions of the buttons in the **MENU OPERATION** panel, see Table 5-1.

Table 5-1 Menu operation panel function

Button	Function	Button	Function
	Enter or confirm an item		Select item
	Exit OSD menu		Change item value

If there is "↵" as the value of an OSD item, click **Enter** to go to the next level of this item. Click **Return** to go back to the previous level. Click **Cancel** to exit OSD menu without saving the modifications.

# Appendix 1 Maintenance



## CAUTION

In order to maintain the image quality and proper functioning of the device, please read the following maintenance instructions carefully and hold rigid adherence.

### Disassembly and Desiccant Replacement

- Carefully follow the instructions in the manual when performing any disassembly operation about the device; otherwise, it might cause water leakage or poor image quality due to unprofessional disassemble.
- Please contact after-sale service for desiccant replacement if there is condensed fog found on the lens after unpacking or when the desiccant turns green. (Not all models are included with the desiccant).

### Maintaining Lens and Mirror Surface

- The lens and mirror surface are covered with antireflection coating, which could be contaminated or damaged and result in lens scratches or haze image when being touched with dust, grease, fingerprints and other similar substances.
- Do not touch the image sensor directly (CCD or CMOS). Dust and dirt could be removed with air blower, or you can wipe the lens gently with soft cloth that moistened with alcohol.

### Maintaining Device Body

- Device body can be cleaned with soft dry cloth, which can also be used to remove stubborn stains when moistened with mild detergent.
- To avoid possible damage on device body coating which could cause performance decrease, do not use volatile solvent such as alcohol, benzene, diluent and so on to clean the device body, nor can strong, abrasive detergent be used.

## Appendix 2 Technical Specifications

Parameter	Specification
Detection method	PIR technology
Installation height	2.2 m–3 m
Operating temperature	-10°C to 50°C for model A and B; -20°C to 60°C for model C
Camera operating humidity	< 95%